


INSTRUCTIONS FOR USING THE EMERGENCY OPENING SYSTEM

If there is a power shortage in the electrical network and it is necessary to open or close the grille, a special crank should be used, which should be stored under supervision. Before inserting the crank into the lifting mechanism, unlock the lock in the bottom bar.

Next steps:

Insert the crank into the slot provided to activate the grille armor (1). Pull the crank “away from the engine” (2) and turn it by raising or lowering (you will feel the resistance at this point). To connect the power supply, push the dipstick towards the motor (5) while turning it slightly. Remove the crank from the slot (6).

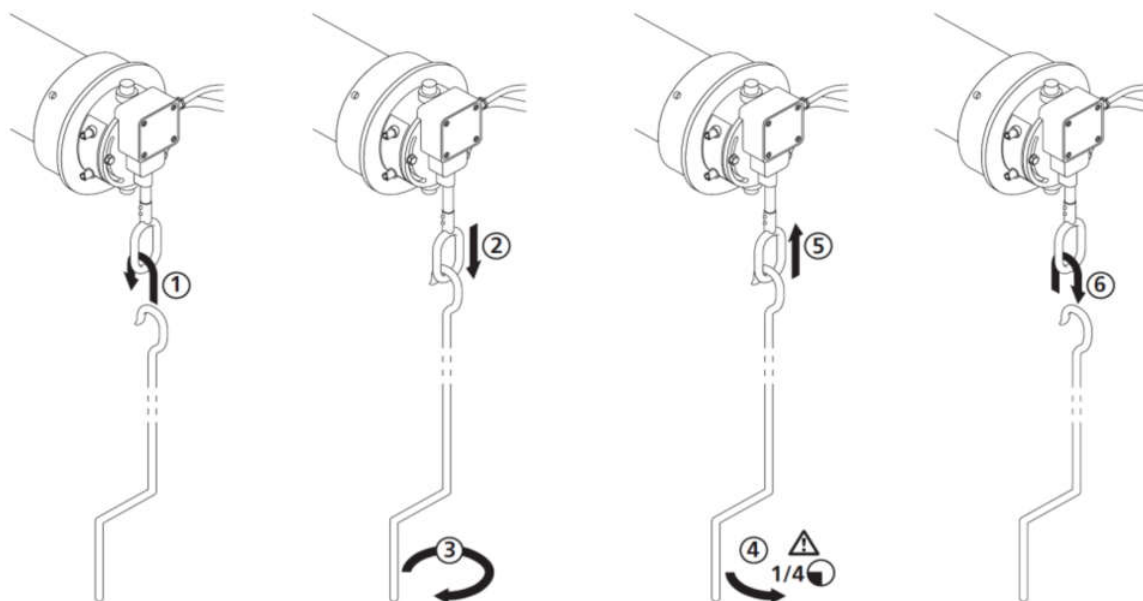

The logo for JUSTART, featuring the word "JUSTART" in a bold, white, sans-serif font on a dark blue rectangular background.

Justart Piotr Glydziak

biuro@justart.pl

www.justart.pl

The manufacturer recommends periodic paid inspections of grilles. The first inspection is recommended after 2 years of use, and subsequent inspections are recommended once a year.